



Ar Merc'het Brao

Dual Filter Overdrive

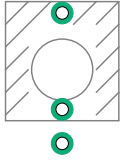





Stereo Jack




Mono Jack




Mono Jack

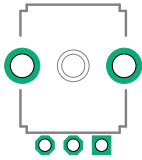


Single Pot

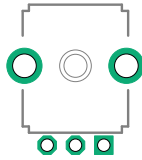


Dual Pot




Switch DPDT



Switch SPDT

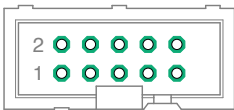

Power Socket



Power Pin Header



Resistor



Capacitor



Diode



Led 3mm




Trimmer



Transistor


TOP

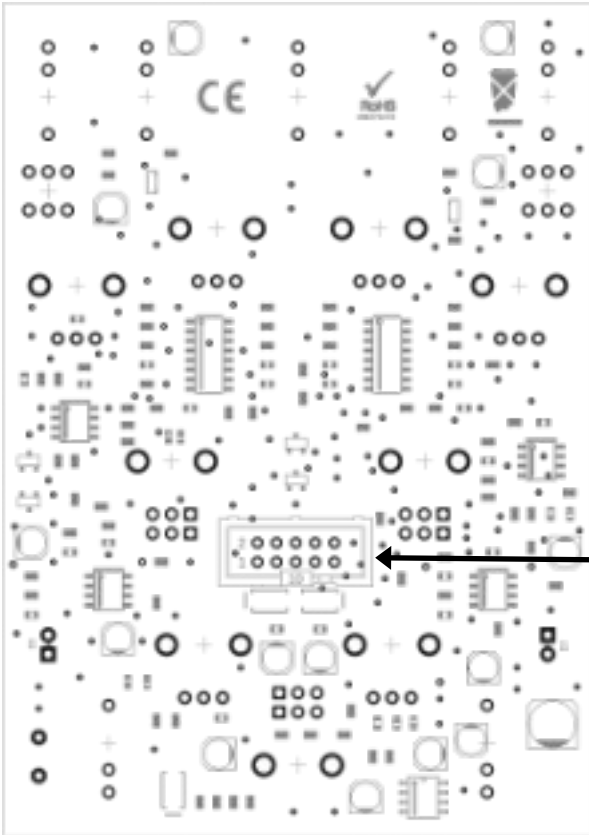

POWER.....2X5 Pin Header
1 & 2 indicate the -12v Rail



BOTTOM

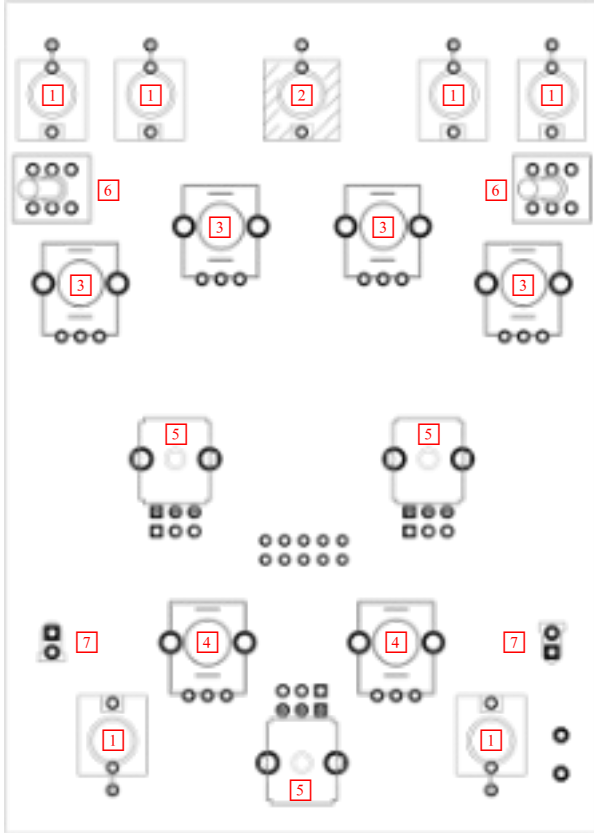

Soldering order

- 1 6 X Mono Jacks (black)
- 2 3 X Stereo Jacks (green)
- 3 4 X 100kΩ Pot
- 4 2 X 100kΩ Pot
- 5 3 X 100kΩ Dual Pot
- 6 2 X DPDT Switch
- 7 2 X Red Led (3mm)

Place the 2 leds without soldering them, then install the panel and put the nuts on the jacks. Adjust the led in the holes on the faceplate and solder them in place.

